





1

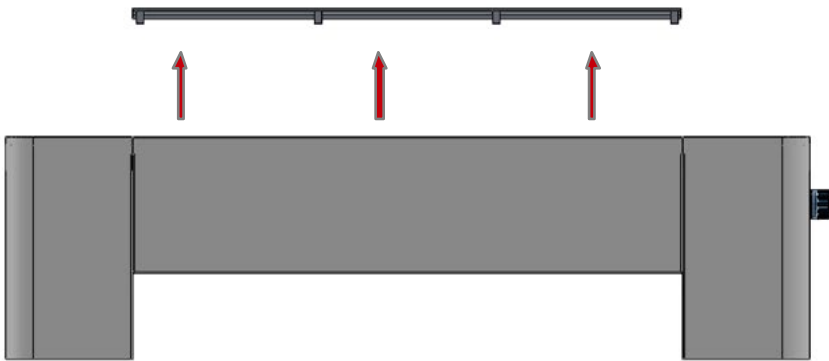


After taking the heater out of its packaging, in the first place, remove the decorative grate.

2

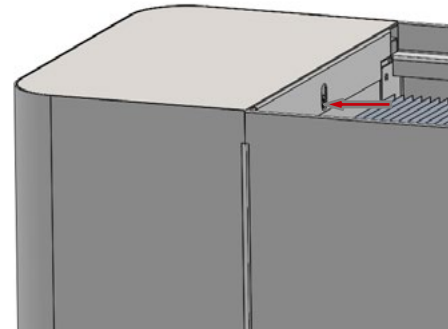

Next unscrew the masking elements along with the fixing covers. To do this, unscrew the lid and the pad under the masking frame.

3

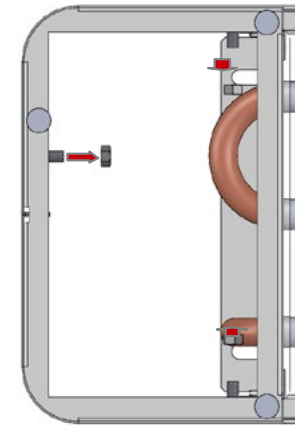


After removing the pads along with the masking frame, unscrew the cover.

4




After removing the aforementioned elements, remove the covers of the legs (Fig. 4) and place the heater in its installation place.

5

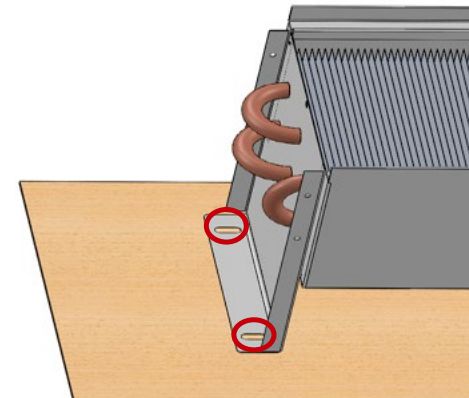


Then, mark the places where the holes will be made for the rawlplugs and the screws that fasten the exchanger and the casing.

6

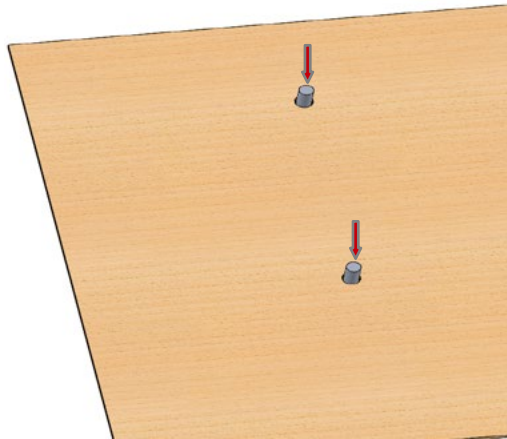

Next make the holes and hammer the rawplugs.


8

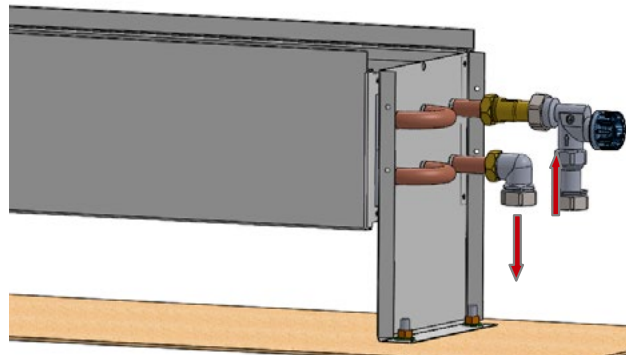

Then, connect hydraulically the heater with the central heating system. It is important to make sure that the connector pipes have been properly countered.

In the V type (bottom supply) heaters, the feeding line should be connected to the external stub pipe, which is located closer to the casing's wall, equipped with a thermostatic valve.

7

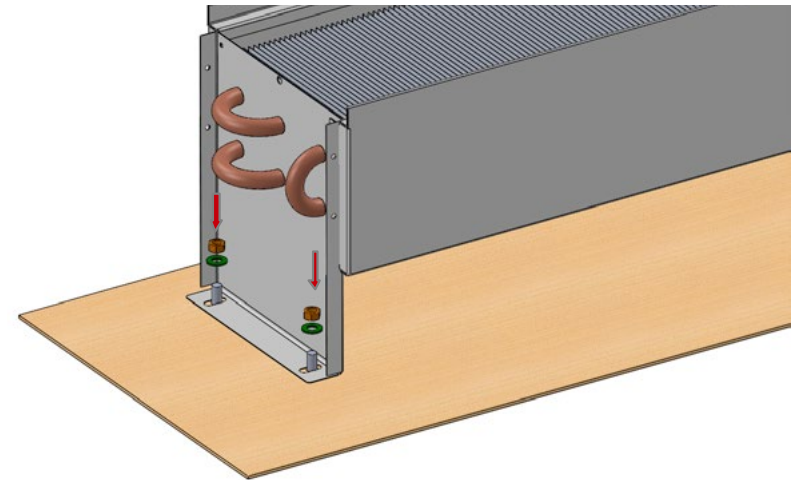

The next step is installing the exchanger. First, the exchanger supports should be screwed down in proper place.

9



After the exchanger was installed, install all the previously unscrewed elements with screws starting from replacing the masking frame of the legs and the thermostatic head.

For a C type side-supplied heater, the hydraulic connection is made after closing the masking frame of the legs.

Lastly, the cover and the masking frames along with the pads should be fixed in the same way they were fastened in the beginning. The last element is to place the decorative grate.



If you have any questions or doubts concerning conducting installation works, please contact us.: tel.: +48 533009415 or e-mail: [wojciech@v-k.pl](mailto:wojciech@v-k.pl)